


SANYO PRO -200 USERS MANUAL

PHONE FEATURES

- COLOR DISPLAY • CALL WAITING • VOICE MAIL
- TEXT MESSAGING • BLUETOOTH • CALLER ID

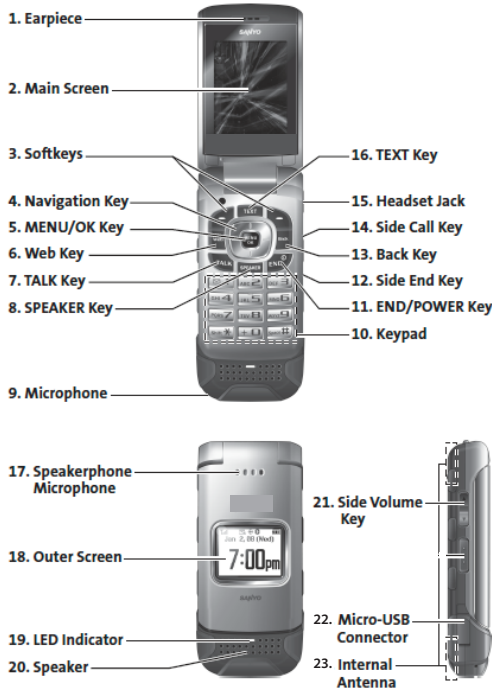

Key Features

- 1. Earpiece** lets you hear the caller and auto-mated prompts.
- 2. Main Screen** displays all the information needed to operate your phone, such as the call status, the Contacts list, the date and time, and the signal and battery strength.
- 3. Softkeys** let you select softkey actions or menu items corresponding to the bottom left and right lines on the main screen.
- 4. Navigation Key** scrolls through the phone's menu options and acts as a shortcut key from standby mode.
Default settings are: **Right:** My Content, **Left:** Calendar, **Up:** Messaging,
- 5. MENU/OK Key** lets you access the phone's menus and select the highlighted choice when navigating through a menu.
- 6. Web Key** lets you access the Web browser.
- 7. TALK Key** allows you to place or receive calls, answer Call Waiting, use Three-Way Calling, or activate Voice Dial.
- 8. SPEAKER Key** lets you turn the speakerphone on and off during a call. You can also use it to answer the call in speaker phone mode.
- 9. Microphone** allows other callers to hear you clearly when you are speaking to them.
CAUTION! Make sure you do not cover the

microphone with your hand while talking.

10. Keypad lets you enter numbers, letters, and characters, and navigate within menus. You can use the numeric keypad for speed dialing.

11. END/POWER Key lets you turn the phone on or off, end a call, or return to standby mode. While in the main menu, it returns the phone to standby mode and cancels your input.

12. Side End Key ends a call while the phone is closed. This key can also be used to display the recent call history.

13. Back Key deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu.

14. Side Call Key lets you place calls without opening the phone. Press to make a voice dial or to redial with the phone closed.

15. Headset Jack allows you to plug in an optional headset for convenient, hands-free conversations. **CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.

16. TEXT Key gives you quick access to the Send Text screen for sending messages.

17. Speakerphone Microphone receives your voice input while in speakerphone mode.

18. Outer Screen lets you monitor the phone's status and see who's calling without opening the phone.

19. LED Indicator lets you show your phone's connection and charging status at a glance.

20. Speaker lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing or any of the side keys. The speaker also lets you hear the caller's voice in speakerphone mode.

21. Side Volume Key allows you to adjust the ringer volume in standby mode (with the phone open) or adjust the voice volume during a call. The volume key can also be used to scroll up or down to navigate through the different menu options.

22. Micro-USB Connector allows you to connect a phone charger or other accessories to your phone. **CAUTION!** Inserting an accessory into the incorrect connector may damage the phone.

23. Internal Antenna facilitates reception and transmission. To maximize performance, do not obstruct while using the phone.

Viewing the Display Screen

Your phone's display screen provides information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

- indicates your current signal strength. (The more lines you have, the stronger your signal.)
- indicates you are "roaming" off the Sprint National Network.
- means your phone cannot find a signal.
- means the call is on hold.
- tells you a call is in progress.
- indicates you have missed voice calls.
- indicates you have scheduled events or call alarms.

- indicates you have alarm clock or countdown notifications.
- indicates you have new SMS Voice messages.
- indicates you have new SMS Text messages.
- indicates you have new picture messages.
- indicates you have new voicemail messages. (Press and hold to call your voicemail box.)
- indicates you have urgent messages.
- indicates you have two or more different types of missed calls, scheduled events, call alarms, or alarm clock or countdown notifications.
- indicates the Bluetooth feature is enabled (blue icon).
- indicates the handset is discoverable by another Bluetooth device.
- indicates the handset is connected to a Bluetooth device (green icon).
- indicates the handset is communicating with a Bluetooth device.
- indicates the level of your battery charge. The more black bars you see, the more power you have left. (The icon is animated while the battery is charging.)
- indicates your battery is charging in "Power Off" state.
- indicates volume level 1 to 8 and vibrate feature are set.
- indicates 1-beep feature is set.
- indicates 1-beep and vibrate feature are set.
- indicates all ringer settings are off.
- indicates all ringer settings are off and the vibrate feature is set.
- indicates all the sound settings except applications volume are off and the vibrate feature is set.
- indicates all the sound settings are off.
- indicates you have a new voice message when Screen Call is activated.
- indicates the Screen Call Auto setting is on.
- indicates your phone is operating in TTY mode.
- indicates the alarm clock or countdown setting is on.
- indicates the speakerphone mode is set to on.
- indicates a call is in progress using the Bluetooth device.
- indicates the Car Kit device is set to on.
- indicates the wired Headset device is set to on.

Features of Your Phone

The PRO-200 by SANYO is lightweight, easy to use, and reliable, and it offers many features and service options. This list previews some of those features and provides page numbers where you can find out more:

- Digital dual-band capability allows you to make and receive calls and to roam on other 1900 and 800 MHz digital networks.
- SMS Text Messaging and SMS Voice Messaging provide quick and convenient messaging capabilities.
- Your Contacts list allows you to store up to 600 entries, with up to seven phone numbers per entry.

CONTINUED ON OTHER SIDE

- The built-in Calendar offers several personal information management features to help you manage your busy lifestyle.
- T9 Text Input lets you quickly type messages with one keypress per letter.
- Speed dial lets you dial phone numbers with one keypress or two keypresses.
- The built-in Bluetooth technology allows you to connect wirelessly to a number of Bluetooth devices to share information more easily than ever before.
- Your phone allows you to run multiple applications simultaneously.

Turning Your Phone On and Off

Turning Your Phone On

• Press END

Once your phone is on, it may display “Looking for service...,” When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls. If your phone is unable to find a signal after five seconds of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode. In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for service by pressing any key (when your phone is turned on).

Turning Your Phone Off

Press and hold **END** for two seconds until you see the powering down animation on the display screen. Your screen remains blank while your phone is off (unless the battery is charging).

Battery Capacity

Your phone is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 4.9 hours of continuous digital talk time. When there are approximately two minutes of talk time left, the phone sounds an audible alert and then turns off.


Installing the Battery

1. Insert the battery into the opening, making sure the connectors align. Gently press down to secure the battery.
2. Replace the battery cover and press up until you hear a click.
3. Lock the battery cover by sliding the latch into its locked position.



Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Slide the battery cover latch into its unlock position and slide the battery cover downward to remove it.
3. Lift up the battery and remove it from the phone.



Charging the Battery

Charge your battery as soon as possible so you can begin using your phone. Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off, and you will lose any information you were just working on. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon () appears and the phone displays a warning message.

Using the Phone Charger


1. Plug the phone charger into an electrical outlet.
2. Open the micro-USB connector cover located on the lower left side of your phone.
3. Plug the other end of the phone charger into the micro USB connector.
 - A red indicator light means the battery is charging.
 - A green indicator light means the battery charging is complete.

The battery can be recharged before it becomes completely run down.

Making and Answering Calls

Holding Your Phone

To maximize performance, do not obstruct the internal antenna area. Also make sure you do not cover the microphone with your hand while talking.

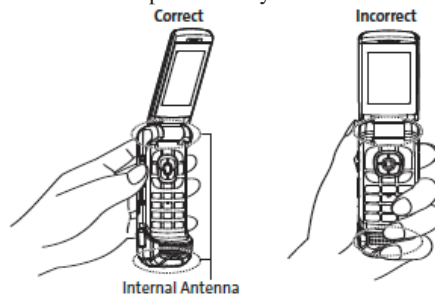

Making Phone Calls

Placing a normal phone call from your wireless phone is as easy as making a call from any landline phone. Enter the number, press **TALK**, and you're on your way to clear calls.

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number from standby mode. (If you make a mistake while dialing, press **BACK** to erase the numbers.)
3. Press **TALK**.
4. Press **END** or close the phone when you are finished.

To place a call with the phone closed:

1. Make sure your phone is on and the Side Key Guard feature is disabled.
2. Press and hold the volume on the right side of the phone.
3. Follow the system prompts. (The call will be made in speakerphone mode unless you have a headset attached to the phone.)
 - Say the name of your registered Voice Dial entry.

You can also place calls from your phone by speed dialing numbers from your Contacts and using your History listings.

Answering Phone Calls

To answer an incoming call with the phone open:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press **TALK** to answer an incoming call. (Depending on your settings, you may also answer incoming calls by opening the phone or by pressing any number key.)

To answer an incoming call with the phone closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press the side call key (volume) on the right side of the phone. (The call will be answered in speakerphone mode.) – or –
Open the phone to use the earpiece. Your phone notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The indicator light flashes.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. The caller's phone number may also be displayed, if available.

Turning Bluetooth On & Off

By default, your device's Bluetooth feature is turned off. Turning Bluetooth on makes your phone “discoverable” by other in-range Bluetooth devices. To make your phone visible to other devices you must also ensure that your phone's visibility is not set to Hidden.

To turn Bluetooth on:

1. Press  > **Settings** > **Bluetooth** > **On/Off**.
2. Select **On** and press  to enable Bluetooth.

To turn Bluetooth off:

1. Press  > **Settings** > **Bluetooth** > **On/Off**.
2. Select **Off** and press  to disable Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:

-  – Bluetooth feature is active. It turns to green when connected to a Bluetooth device.
-  – Your phone is discoverable by another Bluetooth device.
-  – Your phone is communicating with a Bluetooth device.

The **Bluetooth Settings** menu allows you to set up many of the characteristics of your phone's Bluetooth service, including:

- Entering or changing the name your phone uses for Bluetooth communication.
- Setting your phone's visibility (or “discoverability”) for other Bluetooth devices.
- Displaying your phone's Bluetooth address.

To access the Bluetooth Settings menu:

1. Press  > **Settings** > **Bluetooth**.
2. Set your Bluetooth options.
 - Select **On/Off** to enable or disable Bluetooth.
 - Select **Visibility** > **Always Visible**, **Visible for 3 min.**, or **Hidden** to set your Bluetooth visibility.
 - Select **Device Name** to set a Bluetooth name for your phone.
 - Select **Device Info** to display your phone's Bluetooth name, profiles, and address.
 - Select **Trusted Devices** to display a list of trusted Bluetooth devices.
 - Select **Voice Priority** > **Phone** or **Hands-free** to choose the default device you want to use for incoming and outgoing calls.

Bluetooth Profiles

All of the Bluetooth settings you configure are stored in your phone's Bluetooth user profile. You can use different profiles for specific Bluetooth functions.

• **HSP: Headset Profile**—This profile functions as a wireless ear jack. When an incoming call is received, the ringer can be heard through the headset instead of through the handset. The call can then be received by pushing a button. While using the headset, you can use the headset instead of the phone by pushing a button on the headset, the same as inserting a jack into the phone. Increase or decrease the volume by using the volume key on the side of the handset.

• **HFP: Hands-Free Profile**—This profile functions as a wireless car kit. Incoming calls ring to the hands-free headset or device. Calls can be received by pressing a button on the headset or device. For dialing, four functions are supported: recent call dial, voice dial, speed dial, and number dial. Increase or decrease the volume by using the volume key on the side of the handset.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to your phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Voicemail and personal greeting as soon as your phone is activated.

1. Press and hold .
2. Follow the system prompts to:
 - Create your passcode.
 - Record your name announcement.
 - Record your greeting.
 - Choose whether to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your passcode).

Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press .

To display your Missed Log:

- ▶ Press  > Messaging > Voicemail > Details.

Retrieving Your Voicemail Messages

You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold . (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages

1. Press  > Messaging > Voicemail.
2. Select **Call Voicemail** to listen to your messages.

Using Another Phone to Access Messages

1. Dial your wireless phone number.
2. When your voicemail answers, press .
3. Enter your passcode.

Using SMS Text Messaging

With SMS Text Messaging, you can send and receive instant text messages between your wireless phone and another messaging-ready phone. When you receive a new message, it will automatically display on your phone's screen.

In addition, SMS Text Messaging includes a variety of preset messages, such as "Can't talk right now. Send me a message." that make composing messages fast and easy. Use your phone to customize your own preset messages (up to 50 characters.)

Composing SMS Text Messages

1. Press  > Messaging > Send Message > Text Message and select the entry method you prefer:
 - **Goto Contacts** to select a recipient from your Contacts (qualifying Contacts entries must contain a wireless phone number)
 - **Phone#** to use the keypad to enter a wireless phone number directly.
2. Press **Next** (left softkey) when you have finished entering recipients. (You may include up to 50 recipients per message.)
3. Enter a message or use the preset messages or smileys (icons) and press **OK** (left softkey).
 - To type a message, use your keypad to enter your message. Press **Mode** (right softkey) to select an input mode.
 - To use a preset message or a smiley, press **Mode** (right softkey), select **SMILEYS** or **Preset Messages**, and then select a message or emoticon and press .
4. Scroll down to select the message priority (**Ordinary** or **Urgent**), set the callback number, set the signature, or set the delivery receipt.
5. Review your message and press **Send** (left softkey). (You may select additional messaging options by pressing **Options** [right softkey] to change the recipients or save to draft.)

Accessing SMS Text Messages

To read an SMS Text message:

- ▶ When you receive a text message, it will be displayed automatically on your phone's screen. Use your navigation key to scroll down and view the entire message.

To reply to an SMS Text message:

1. While the message is open, press **Reply** (left softkey).
— or —
Highlight the message in the Inbox, and press **Options** (right softkey) > **Reply With** > **Text Message**.
2. Compose your reply or use the preset messages or icons.
 - To type a message, use your keypad to enter your message. Press **Mode** (right softkey) to select an input mode.
3. Review your reply and press **Send** (left softkey). (You may select additional messaging options by pressing **Options** [right softkey] to change the recipients or save to draft.)